


# ASSEMBLY INSTRUCTIONS

## Adirondack Dining Chair

**Tools Not Included but Required:** Hammer, 7/16" wrench, either a power tool, hand driver or ratchet wrench that will accept a 1/4" hex drive bit.

**Tools Included:** #2 Square Drive Bit, 4mm Allen Wrench

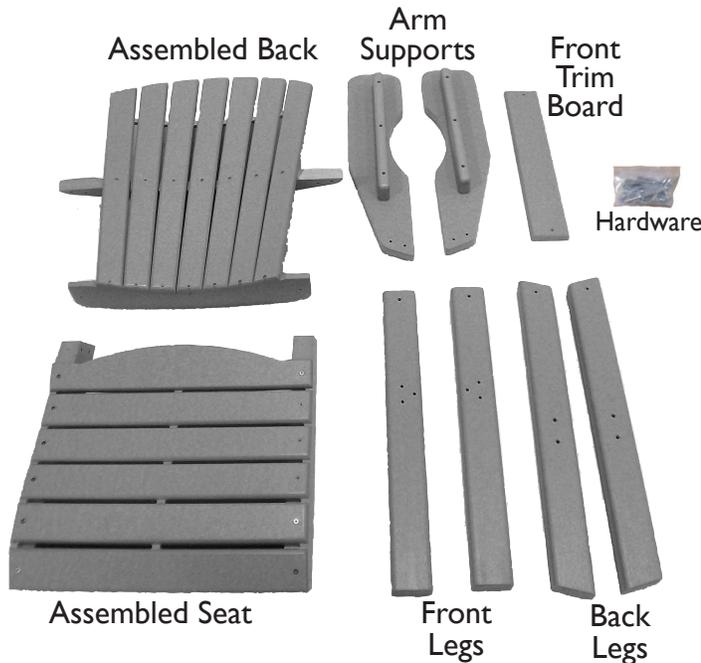

### Parts Included:

- 1 - Assembled Seat
- 1 - Assembled Back
- 2 - Arm Supports (left & right)
- 2 - Back Legs
- 2 - Front Legs
- 1 - Foot Trim Board

### Stainless Steel Hardware Included:

- 8 - 3-1/2" Bolts
- 4 - 3" Bolts
- 2 - 2-1/2" Bolts
- 4 - 1-5/8" Square Head Screws
- 14 - Nuts
- 14 - Flat Washers
- 14 - Lock Washers



1. Lay the seat on it's side. The holes on the front leg are not centered. Make sure the holes are offset to the back of the seat. Line the holes of the front leg (leg with straight cut ends) with the holes on the front of the assembled seat and insert two 3-1/2" bolts.
2. Repeat step 1 for the back leg (leg with angled cut ends). Make sure that the hole 1" from the ends of the legs are both towards the top of the chair.

3. Flip the chair onto the other side and repeat steps 1 and 2. After all legs are on, turn the chair upside down and make sure that it sits flat on the floor.

4. Place a regular washer, lock washer and a nut (in that order) on all 8 bolts. Only hand tighten, DO NOT TIGHTEN UNTIL THE END.



5. Set the chair right side up and slide the back of the chair in place so it fits snug against the seat. Insert a 1-5/8" square head screw into each hole and tighten.

6. Place one arm on the chair with the curve to the inside. Put a 2-1/2" bolt in the top of the arm through the upper back support. Line up the holes in the arm support with the leg and slide a 3" bolt from the inside of the chair leg out through each hole. Place a regular washer, lock washer and a nut on all of the bolts. Only hand tighten, **DO NOT WRENCH TIGHTEN UNTIL THE END.**



**Step 6**

7. Repeat step 6 for the other arm support.

8. Wrench tighten all nuts.



**Step 9**

9. Take the trim board with the holes closest to the top and screw into place beneath the seat using two 1-5/8" square head screws.



**PerfectChoice<sup>®</sup>**  
*furniture*

The perfect choice for lasting comfort and value.

477 Vogt Lane • Chilton, WI 53014 • 800-817-8833  
www.perfectchoicefurniture.com • www.birdschoice.com

Your outdoor furniture is guaranteed for 20 years to never crack, split or fade. To clean, wash with soap and water. For tough stains, use a solution with water and soft scrub or try our furniture cleaner.