


ASSEMBLY INSTRUCTIONS

Swivel Rocking Dining Chair

Tools Not Included but Required: 7/16" wrench, socket & ratchet and a power drill

Tools Included: #2 Square Drive Bit, 4mm Allen Wrench

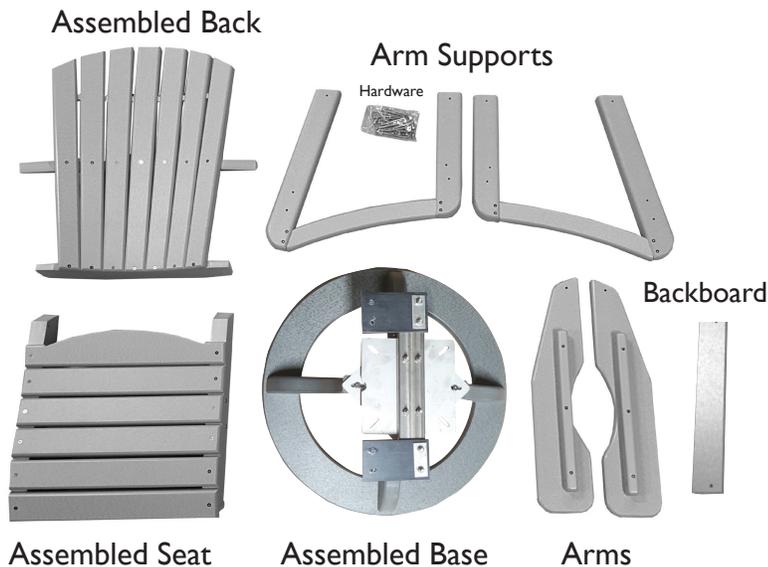

Parts Included:


- 1 - Assembled Back
- 1 - Assembled Seat
- 1 - Set of Arms
- 1 - Assembled Base
- 1 - Backboard
- 2 - Arm Supports (left & right)

Stainless Steel Hardware Included:

- 8 - 3-1/2" Bolts
- 4 - 3" Bolts
- 2 - 2-1/2" Bolts
- 4 - 1-5/8" Deck Screws
- 14 - Nuts
- 14 - Flat Washers
- 14 - Lock Washers
- 4 - Lock Nuts
- 2 - Rectangular 2 Holed Washers

Step 1

1. Place the assembled base onto a flat surface. Then place the seat onto the base lining up the bolts coming out of the horizontal seat support with the holes in the fiberglass springs. Make sure the seat is facing the correct direction. The horizontal seat support should almost entirely be resting on the fiberglass springs. Then, one bolt at a time, line up the 2 holed washer with those same bolts and place a lock nut onto each bolt. Place all 4 nuts onto all 4 bolts first and then tighten.

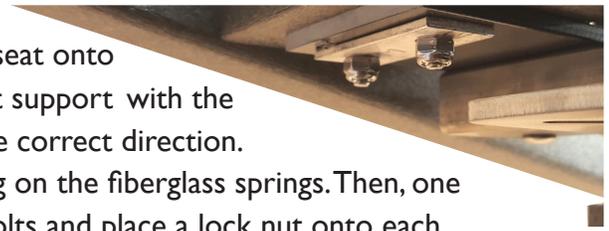

2. Determine your left and right assembled arm supports. The screws holding the assembled arm supports together should face in towards each other. Place a 3-1/2" bolt through all 8 holes of the assembled arm supports and into the seat. Place a flat washer, lock washer and nut onto each bolt and hand tighten only.

Step 2



Step 3



3. Attach the arms using four 3" bolts. The bolts go from the inside of the arm supports out through the arm. Place a flat washer, lock washer and nut onto each bolt and hand tighten only.

4. Attach the back of the chair to the seat of the chair using two 1-5/8" deck screws. Make sure to push the chair back up tight to the seat. Then, place two 2-1/2" bolts down through each arm into the upper back support of the chair back. Place flat washer, lock washer and nut onto each bolt and fully tighten. Next, attach back board to the back of the seat using two 1-5/8" deck screws. The holes are offset towards the top of the chair.

5. Go back and tighten all nuts.

Step 4



6. Enjoy your swivel rocking dining chair!

Your outdoor furniture is guaranteed for 20 years to never crack, split or fade. To clean, wash with soap and water. For tough stains, use a solution with water and soft scrub or try our furniture cleaner.

PerfectChoice[®]
furniture

The perfect choice for lasting comfort and value.

477 Vogt Lane • Chilton, WI 53014 • 800-817-8833
www.perfectchoicefurniture.com • www.birdschoice.com