

# VertiCable Series

(Style C80)


## Adjustable Gate Installation Instructions



- These instructions must be followed exactly as written and the materials used must be exactly as shown in the instructions. Any deviation from the instructions or variation in the materials used/installed may result in an unsuccessful installation.

### Standard Width Gate

1. Position hinges on gate as shown (Fig 1).

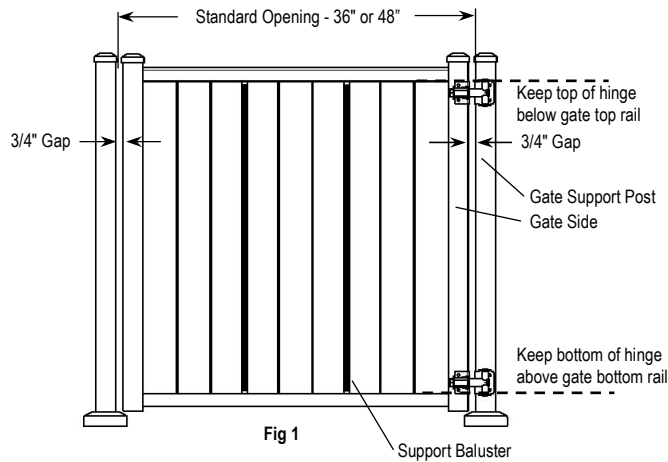

2. Follow installation instructions included with hinges and latches. **NOTE: Align gate rails with adjacent railing when attaching gate to gate support post.**

### Special Width Gate

1. Remove caps from both gate sides by lightly tapping with a rubber mallet. Remove screws inside top and bottom of each gate side (Fig 2).
2. Loosen cables between gate sides and support balusters by loosening 3/4\"/>



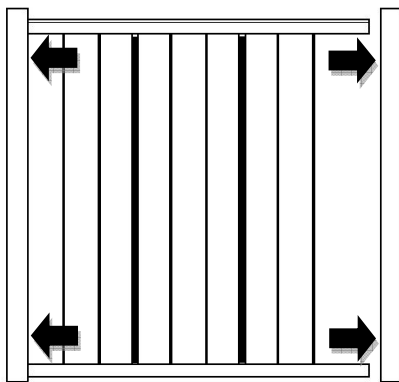


Fig 3


### Special Width Gate Cont'd

4. Position gate panel against gate support posts with equal baluster and cable spacing on each end of rails (if possible). Mark rails where they are to be cut (Fig 4). Measure distance between mark and first cable on both ends as shown in Fig 4 prior to cutting rails.

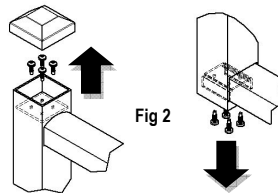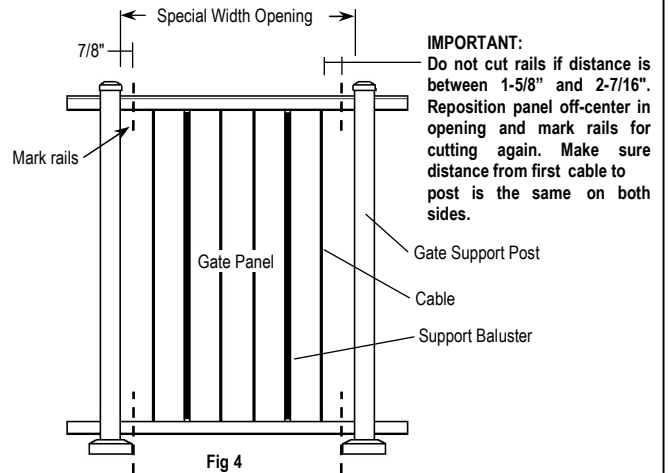

**IMPORTANT:**  
Do not cut rails if distance is between 1-5/8\"/>

5. Cut rails.
6. Cable(s) 1-5/8\"/>
- 7. Slide gate sides onto rails. Reinstall screws and caps removed in step 1.

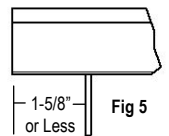

8. Properly seat (Fig 6) and tension cable(s) loosened in step 2 by tightening hex nut(s) on underside of bottom rail. Proper cable tension is 200 lbs. [90 kg] per cable. A cable tension gauge is recommended. **Do not overtighten.**
9. Refer to steps in *Standard Width Gate*.

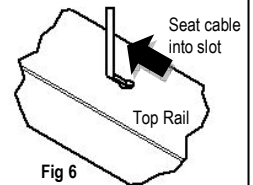


Fig 6