Trex® Outdoor Furniture™

Assembly Instructions

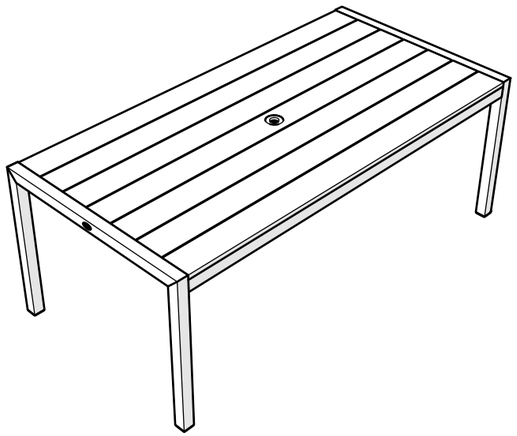

TX8380N

Harvest 39" x 78" Dining Table

11/03/2017

trexfurniture.com

20-Year Warranty

To view our full warranty, please visit
trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook!
facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support@trexfurniture.com**

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:
Simply wipe down with soap and water.

For a deeper clean:
You'll need:
» ⅓ bleach and ⅔ water solution
» clean cloth
» soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

TOOLS

7/16" wrench
(not included)

PARTS

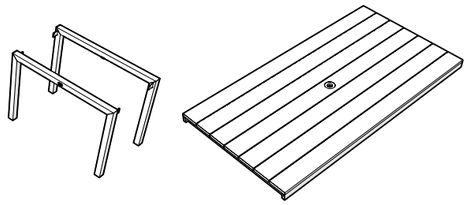

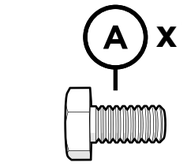

.5" Bolt— HHC.25-20X.5

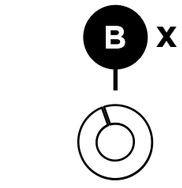

Spring Lock Washer
HW.25SL

1

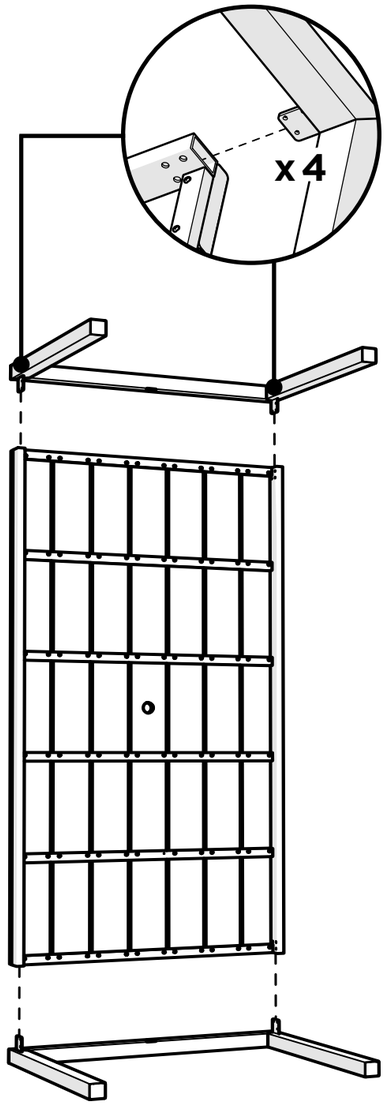

2

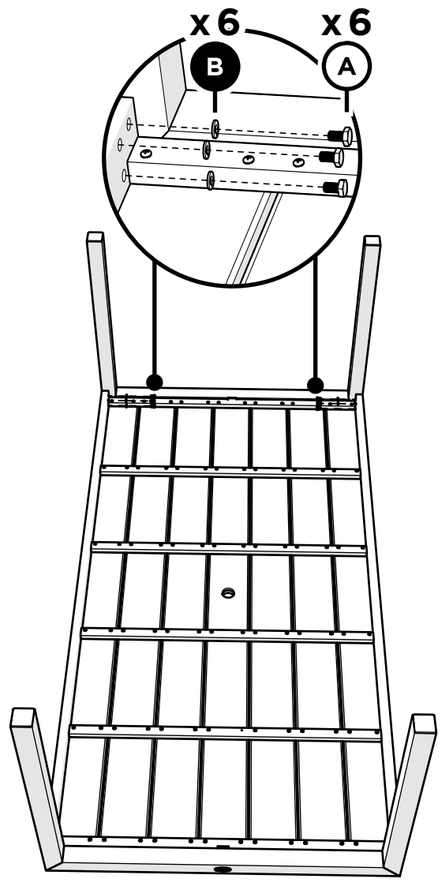

3

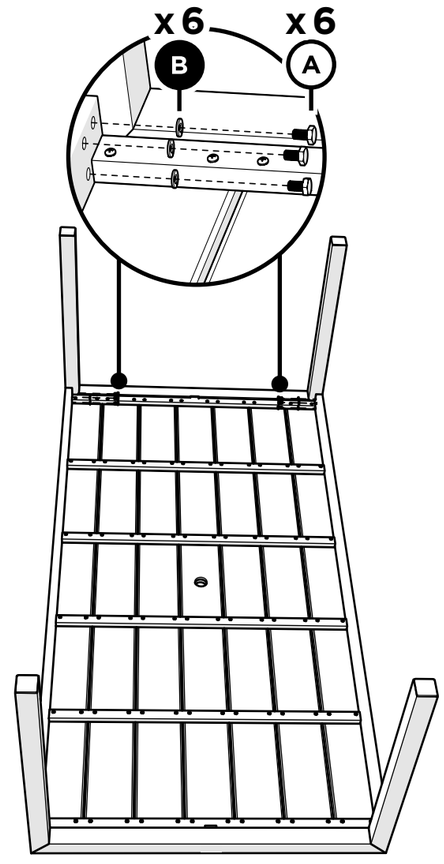

Trex® Outdoor Furniture™