


## Instructions for Aluminum Gate



www.colorguardrailing.com

# 7 Attach Hinges and Latch

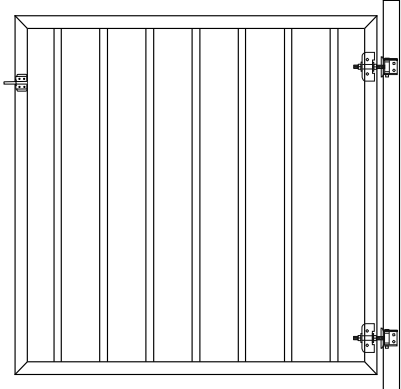

.75" Gap on both sides  
(approx.)

1. Posts should be securely fastened and all railings installed prior to gate installation.
2. Gates require a minimum opening of 36" or 42" (from inside to inside of posts).
3. **Position gate into opening with weep holes down. Shim bottom of gate to desired height.**
4. Determine where your hinges need to be mounted for desired swing direction.
5. Install (2) hinges to post. The wider part of hinge is mounted to the gate.
6. Install hinge to gate: adjust gate to swing level.
7. Locate and install latch.

*Installer is responsible for quality workmanship and meeting all building codes.*

MADE IN THE USA