

INSTALLATION | SHADOW RAIL CONNECTOR - STAIR


IMPORTANT


UPPER (A) and LOWER (B) Shadow Rail Connector Stair assemblies look similar but are in fact UNIQUE. Each Stair assembly contains a MALE and FEMALE part specifically for UPPER and LOWER ends of the RAIL. Familiarize yourself with the corresponding Stair assembly and the end of the RAIL it was designed for.

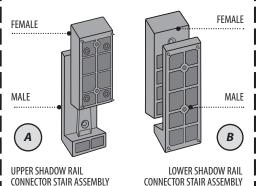

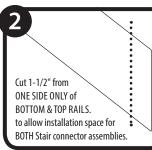




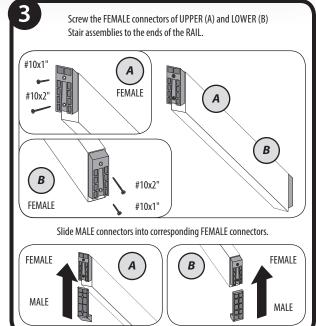


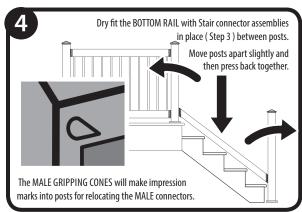



Remove the BOTTOM
RAIL and slide apart MALE
connectors. Relocate and
screw MALE connectors
to posts.
Impression marks from
gripping cones will help.
Verify the corresponding
UPPER (A) and LOWER (B)


MALE connectors.

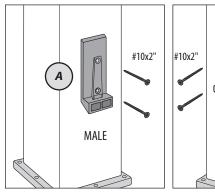

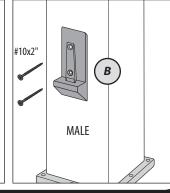

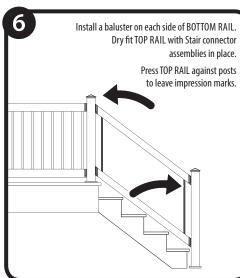

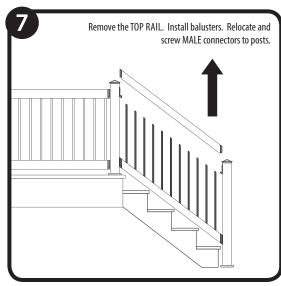

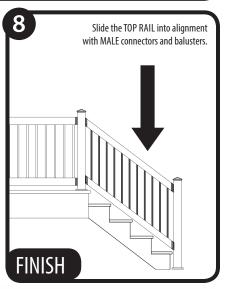

TOLL FREE 1-800-832-8914 www.colorguardrailing.com

