

## Vertical Post Light

It is the responsibility of the installer to meet all code and safety requirements and implement the appropriate installation techniques for each situation. DekPro Manufacturing or its distributors shall not be held liable for improper or unsafe installation.

**Required Materials:** Phillips head screw driver, drill, #2 phillips drill bit, 1/2" drill bit, pencil, and eye protection.



### Step 1

Remove 2 ea. screws from bottom of light to dis-assemble fixture for installation.




### Step 2

Locate and attach backer plate to post using 2 ea. self-drilling screws. Ensure light is plumb and centered




### Step 3

Drill 1/2" diameter hole to allow for passage of Quick Connect wires. Clean metal shavings from fixture.

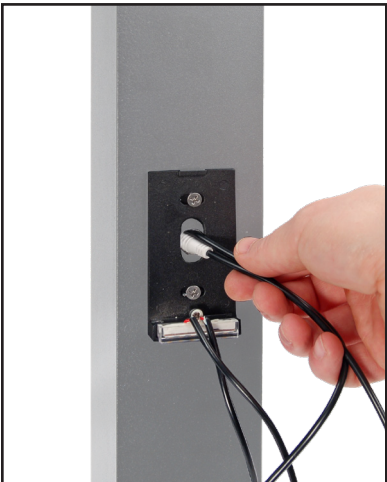

### Step 4

Pass wires through the hole and fish up the post to connect to perimeter wires. *Use of a fish tape or similar item may be useful.*

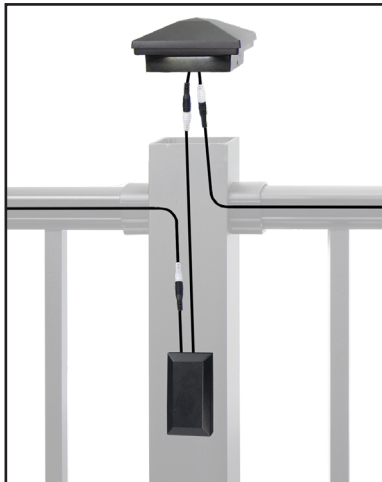

### Wiring diagram

Shown with optional post cap light.



### Step 5

Slide vertical post light cover onto the backer plate until fully seated. Re-install bottom screws to secure cover in place.