





VS36VKWO Assembly Instructions

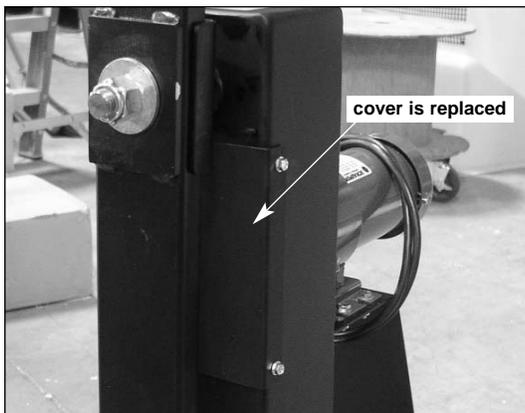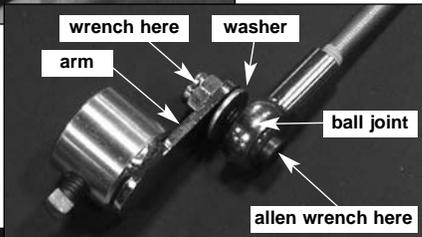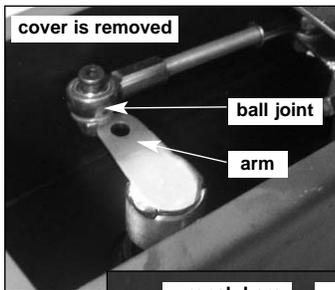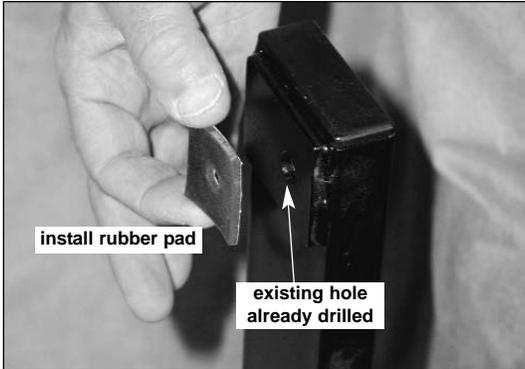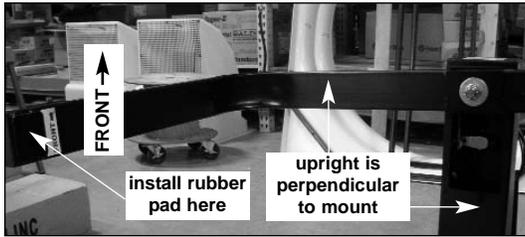

NOTE: Assembly of the VS36VKWO requires two persons!

Tools required:

- 5/16" nut driver or wrench
- 1/2" wrench
- 5/32" allen wrench

Preparation:

Remove the VKWO assembly from the box and unpack the fan. Find the hardware bag and make sure it includes

- two (2) detent pins
- two (2) push nuts
- two (2) rubber pads

Install a rubber pad on the inside of each upright. Peel off the adhesive covering and center the hole in the pad over the existing hole on the upright as pictured.

Connect the oscillator linkage:

Rotate the upright until it is perpendicular to the mount. Be sure the arrow indicating the FRONT of the upright is pointing away from the mounting plate.


NOTE: If the linkage is connected with the arrow on the upright pointing towards the mounting plate, the oscillator will run backwards, the fan will be mounted backwards, and damage to the assembly may result!

Use the 5/16" nut driver or wrench to remove the four (4) screws that hold the cover on the mount.

Attach the ball joint to the arm using the 5/32" allen wrench on top and the 1/2" wrench to hold the nylock on the bottom. Be sure to install the components in the order shown, with the washer between the ball joint and the arm. Do not overtighten! The assembly must be movable but not loose.

Replace the cover and tighten the four screws.


Attach the oscillator / upright assembly onto the post or wall.

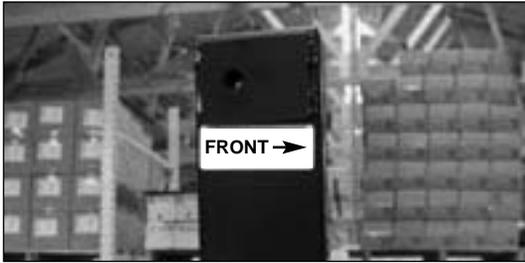

Install the fan onto the oscillator / upright assembly:

*** Installation of the fan requires two persons! ***

Lift the fan into position. Be sure the front of the fan is facing out as well as the front of the upright. There is a label on the upright that indicates which side is the front.

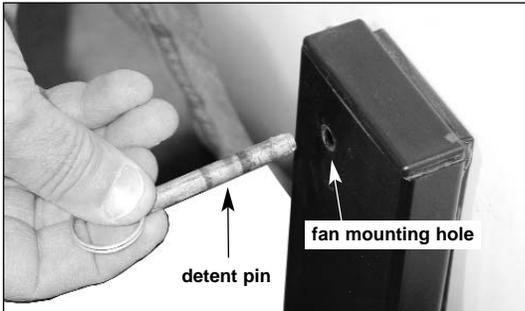


Insert a detent pin through the left side of the fan mounting hole in the upright into the hole in the left side of the fan. Repeat this step for the right side.

Install tilt lock to upright:

Remove knob from fan.

Position slip nut on the inside of the upright centering over the tilt lock rod and tilt lock mounting hole by sliding slip nut down on the tilt lock rod.

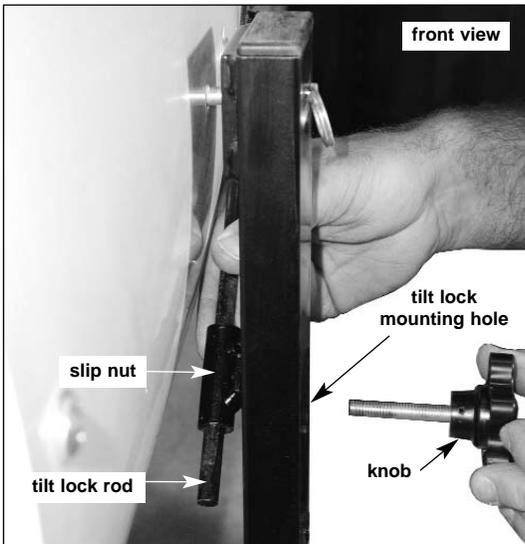

Insert the knob through the tilt lock mounting hole in the upright and into the slip nut. Tighten the knob securely. A fully assembled tilt lock is pictured below.

Assembly is complete!



**VS36VKWO
fully assembled**



SCHAEFER
Ventilation Equipment

800-779-3267

sales@schaefervent.com • www.schaefervent.com