

Instructions for Smooth and Fluted 4", 6" & 8" Post Wrap



COLOR GUARD
RAILING SYSTEMS
www.colorguardrailing.com


Component List:

Post Wrap - 4

Tools Required:

Measuring tape
PVC Cement (optional)
Saw with a fine tooth blade
Hammer
Roofing nails recommended

Always wear safety goggles

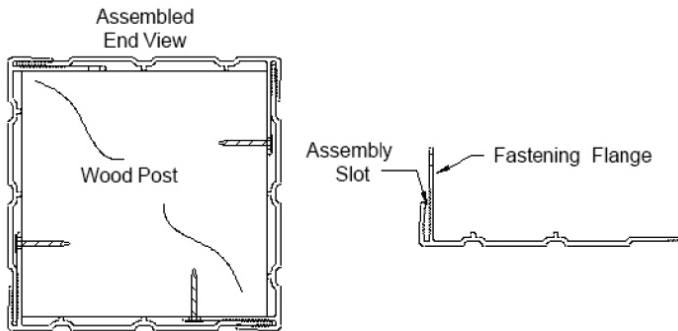

Installer is responsible for quality workmanship and meeting all building codes.

MADE IN THE USA

1 Measure and Cut Post Wrap



Measure the length of Post Wrap needed and cut to length using a fine tooth saw.

2 Attach Post Wrap

Place the first piece of Post Wrap against the post and fasten using roofing nails through holes provided on the fastening flange. Insert the flat end of the second piece of Post Wrap into the assembly slot of the first piece. Again, attach to the post using roofing nails in the holes provided on the fastening flange. Repeat the previous step to fasten the third piece of Post Wrap. **Do not nail tight.**

3 Complete Installation

When attaching the last piece of Post Wrap, once again begin by inserting the flat end into the assembly slot of the previous piece.

Next, slide the slot of the fourth piece over the flat end of the first piece. In most applications the Post Wrap will be secure, but PVC Cement may be used. Trim post with Adjustable Post Collar, sold separately.